

## **Operating Instructions broncolor IR receiver**

The IR receiver allows in conjunction with the broncolor infrared transmitters (all channels) releasing of broncolor power packs, which do not have an incorporated IR receiver.

### **Mounting on the broncolor power pack**

Affix the IR receiver to the side of the power pack (near the sync socket) by means of the supplied velcro tape. This facilitates removal of the IR receiver when transporting or storing the power pack.

Connect the power pack and the IR receiver with the synchronous cable and the short mains cable. Plug the longer power pack mains cable into the IR receiver.

### **Function check**

1. Activate the power pack.
2. Check release using the red manual button on the IR transmitter.

### **Failure to function**

- Check the connectors (synchronous cable and mains cable).
- If the range of the transmitter is insufficient and the IR receiver cannot be brought closer to the transmitter, a change of the ambient reflection (white reflection surfaces) could help.
- Replace battery of transmitter if necessary.

### **Technical data**

Power supply:	220 - 240V 100 - 120V
Dimensions:	12,5 x 6,8 x 5cm
Weight:	195g

We reserve the right to make technical changes.