

Description of error codes for Siros

- **F1 = No flash after triggering**
Is the ignition wire correctly connected?
Is the flash tube correctly installed?
Otherwise replace flashtube. If this fault still appears
Unit must be sent to Service for repair
- **F2 = Afterglow**
Switch the unit off (wait 60 sec.) and then switch it on again.
If this fault occurs repeatedly, the flash tube is defective. Please replace it with a new flash tube.
If this fault still appears, Unit must be sent to Service for repair
- **F3 = No charging**
Software error, programming again if it doesn't work, Unit must be sent to Service for repair
- **F4 = Overcharging**
Unit must be sent to Service for repair
- **th = Thermal alarm, capacitors overheated**
A cooling phase of approximately 20 minutes starts. Do not switch the unit off!
(Little hint: go into Standby Mode, the thermos will disappear a little earlier)
- **F8 = Software error**
Software error, programming again if it doesn't work, Unit must be sent to Service for repair
- **F9 = Mains voltage not stable**
Mains voltage not stable, no solution, try again